





LED UV STERILISATION BOX Instruction Manual

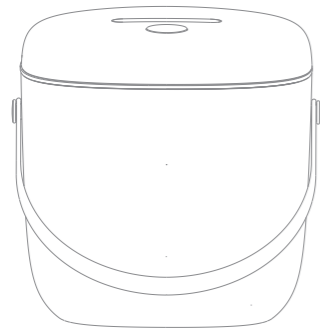

www.lumily.uk

PLEASE READ THIS MANUAL BEFORE USE
& KEEP FOR FUTURE REFERENCE


POWER

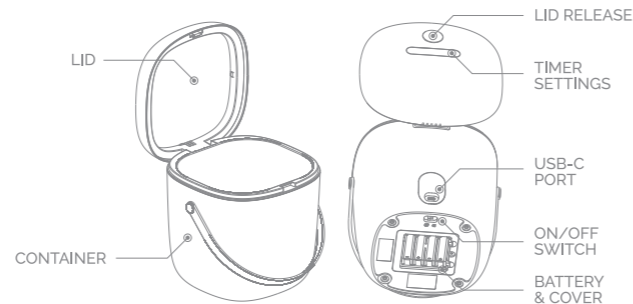

1. Unpackage the box and remove the USB cable.
2. To Power On, there are two power modes:
 - 2.1 Connect the USB cable (Type-C) to the sterilisation box. Connect the USB into a 5V2A power adapter and power on the adapter or connect to a compatible device.
 - 2.2 Open the battery compartment and install 4 AA batteries.
3. Turn the power switch to the "ON" position, and it will make a "drip" prompt tone.
4. Place the sterilisation box upright before use.

NOTE: THE POWER ADAPTER OR BATTERY NEED MEETS THE REQUIREMENT

FEATURES

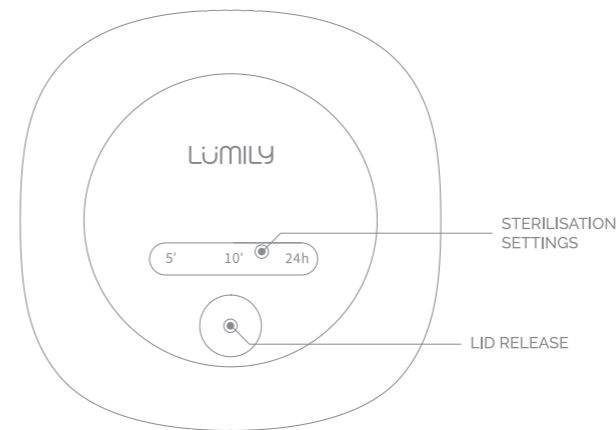

TO OPEN

Press the button located on the top of the product to release the lid. Ensure that the lid is closed firmly before sterilisation.

TO STERILISE

Select the required sterilisation time; 5 minute quick mode, 10 minute boost mode or 24 hour cycle mode.

SPECIFICATION

MODEL	UV.BL.001
UV CONSUMPTION	6 x 6mW = 36mW
UV LED LIFESPAN	10,000 hours
UV WAVELENGTH	260-280nm
INPUT POWER	USB Type-C 5V2A or 4 AA batteries
CAPACITY	2.5L
WEIGHT	1.1KG
CONTENTS	Sterilisation Box USB Cable Instruction Manual
GUARANTEE	See website for details



INSTRUCTIONS

POWER ON

Connect to the power source and move the switch to the 'ON' position.

TO OPEN

Press the button to open the lid, place your object inside and ensure that the lid is closed firmly before setting the sterilisation time.

TO STERILISE

Select the required sterilisation time;

PRESS 5' to activate the 5 minute quick mode

PRESS 10' to activate the 10 minute boost mode

PRESS 24H to activate the 24 hour cycle mode;

UV activates for 10 minutes at 1 hour intervals over 24 hours

Once the sterilisation time is complete, the light will go out.

STOP OR CHANGE MODE

To stop the current cycle simply click on the button originally selected. To select a new cycle click the required sterilisation time.

SAFETY FEATURE

If the lid is opened during sterilisation the cycle will be stopped automatically. Close and reselect the time again to proceed.

MULTI-USE



Textiles



Mobile Phones



Masks



Glasses



Baby Products



Toys



Cosmetics



Jewellery



Earphones

NOTE

Not suitable for liquid and liquid items
Not to be used for food storage



WARNING

Do not expose
to eyes and skin

CLEANING & MAINTENANCE

UNPLUG POWER CABLE

Make sure to disconnect from the power source when cleaning.

WIPE CLEAN

Wipe throughout with a soft dry cloth before and after use. Do not use abrasive materials to clean this product as this will cause damage to the sterilisation components.

REMOVE ITEMS

Do not store items and remove when not in use.

DO NOT IMMERSE IN WATER

Never clean this product with water or liquids.

TURN OFF POWER

Ensure to turn off the power when the product is not in use. Unplug the USB cable and/or remove batteries.

TROUBLESHOOTING

If light flashes 3 times or doesn't work with battery - replace batteries.
For continuous power use the USB cable.



SAFETY PRECAUTIONS

- Ensure that you use the power supply as recommended.
- Never disassemble the UV LED lights, these are non-replaceable.
- Never use under water or beyond the specified range of use.
- Always use on a flat, secure surface.
- Do not move during use, this may cause damage to the box or the items inside.
- Always ensure the lid is firmly closed during sterilisation to avoid UV leakage. UV radiation causes damage to eyes and skin. Avoid exposure of eyes and skin.
- Never use in a strong magnetic environment.
- Never force the lid, it can not be opened more than 90 degrees.
- To secure the lid properly, ensure that no foreign objects are causing an obstruction.
- If product fails to work normally, disconnect from the power source immediately and contact the manufacturer.
- To avoid potential hazards, never disassemble or repair this product.

www.lumily.uk

LUMILY LTD WF10 5PY